



Sound Card Quick Start Guide

For AudioScience ASI5640, ASI5641, ASI5644

1 Introduction


This document explains how to get an ASI5640, ASI5641, ASI5644 working in a Windows PC. For additional information on AudioScience sound cards, please refer to the datasheets on our website www.audioscience.com under Products → PCM Sound Cards, then click on the links for the specific cards to find their datasheet links.

2 What you will need

PC running Windows XP or Vista, or Windows 7
ASI5640, ASI5641 or ASI5644
Windows WAVE, WDM or Combo driver v3.14.00 or later
ASISControl (installed when you run the AudioScience driver EXE)

3 Installation

1. With your PC turned off, install the ASI5640, ASI5641 or ASI5644. Secure the card in your PC.
2. Start the PC and cancel out of the Windows Found New Hardware Wizard. AudioScience driver version 3.14.00 or newer must be installed. Go to www.audioscience.com and under Download click on Windows Drivers. Scroll down and select the correct driver for your application – Wave, WDM or Combo (for help, look at the top of the page under “Information about our drivers”). When installing the driver you will see a screen with the following information:

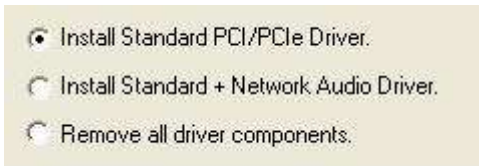

Pick “Install Standard” when installing an AudioScience sound card.

A reboot is required after installing the driver.

3. Start the PC and you will now see a shortcut to ASISControl on your desktop. Open ASISControl, click on ASI5640/41/44 in the top pane and you should see the ‘topology’ view of the sound card in the left pane. Clicking on a ‘node’ in the left pane will bring up its information in the right pane.

If you have any questions please e-mail us at support@audioscience.com , we will be happy to assist you. Thank you for choosing AudioScience.

<end>